



TEMPLATE

ALUMINIUM RAILINGS MP-53.30-1


27.12.2017

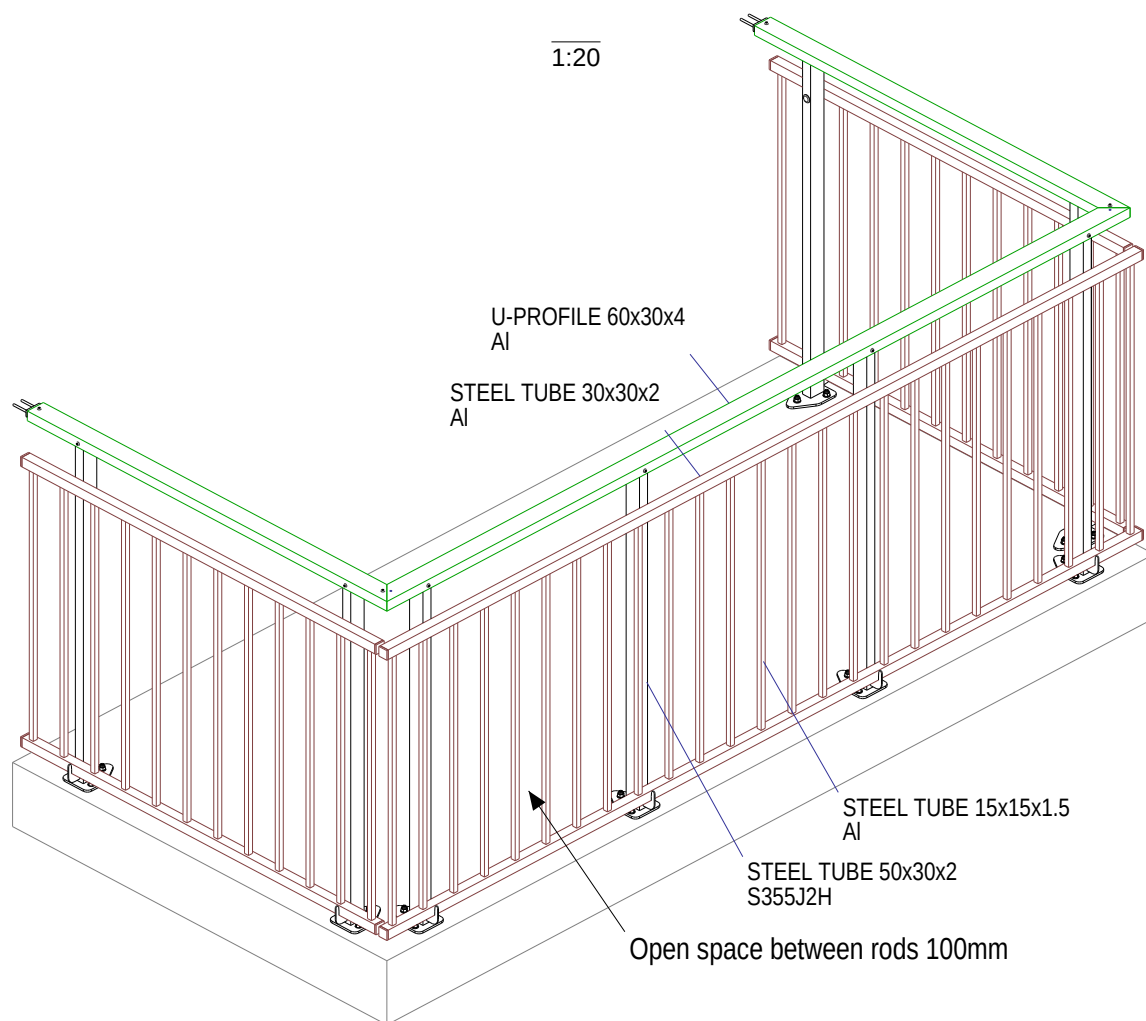

Side view
1:10

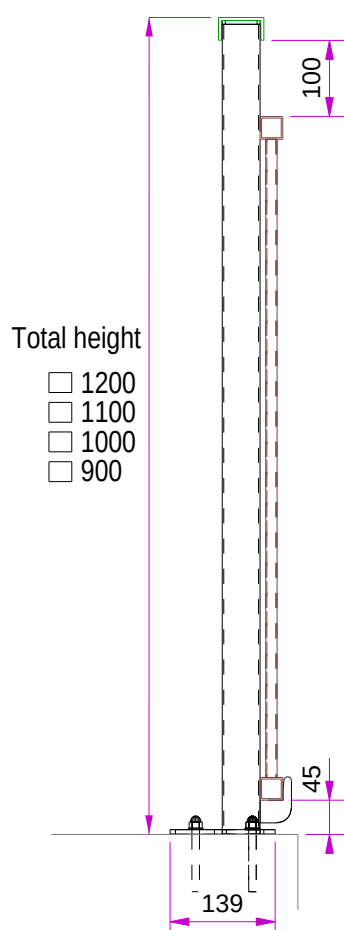

Top view
1:20

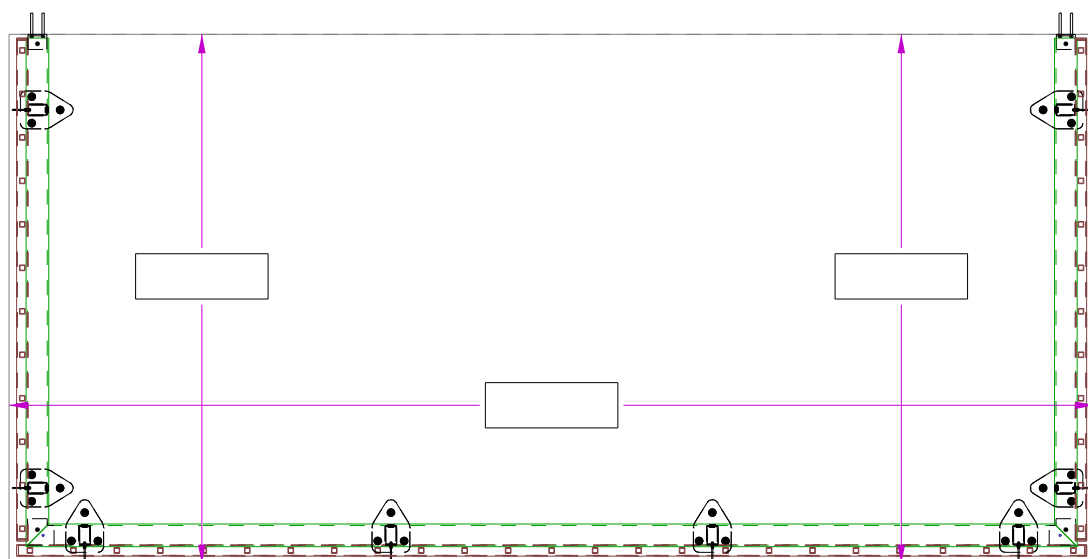

• staBico •

Producer: STABICO OU

Tallinn, Estonia


Tel: +372 555 17 989

e-mail: stabico@stabico.ee


Web: www.stabico.ee

Step 1
1:20


Installing columns

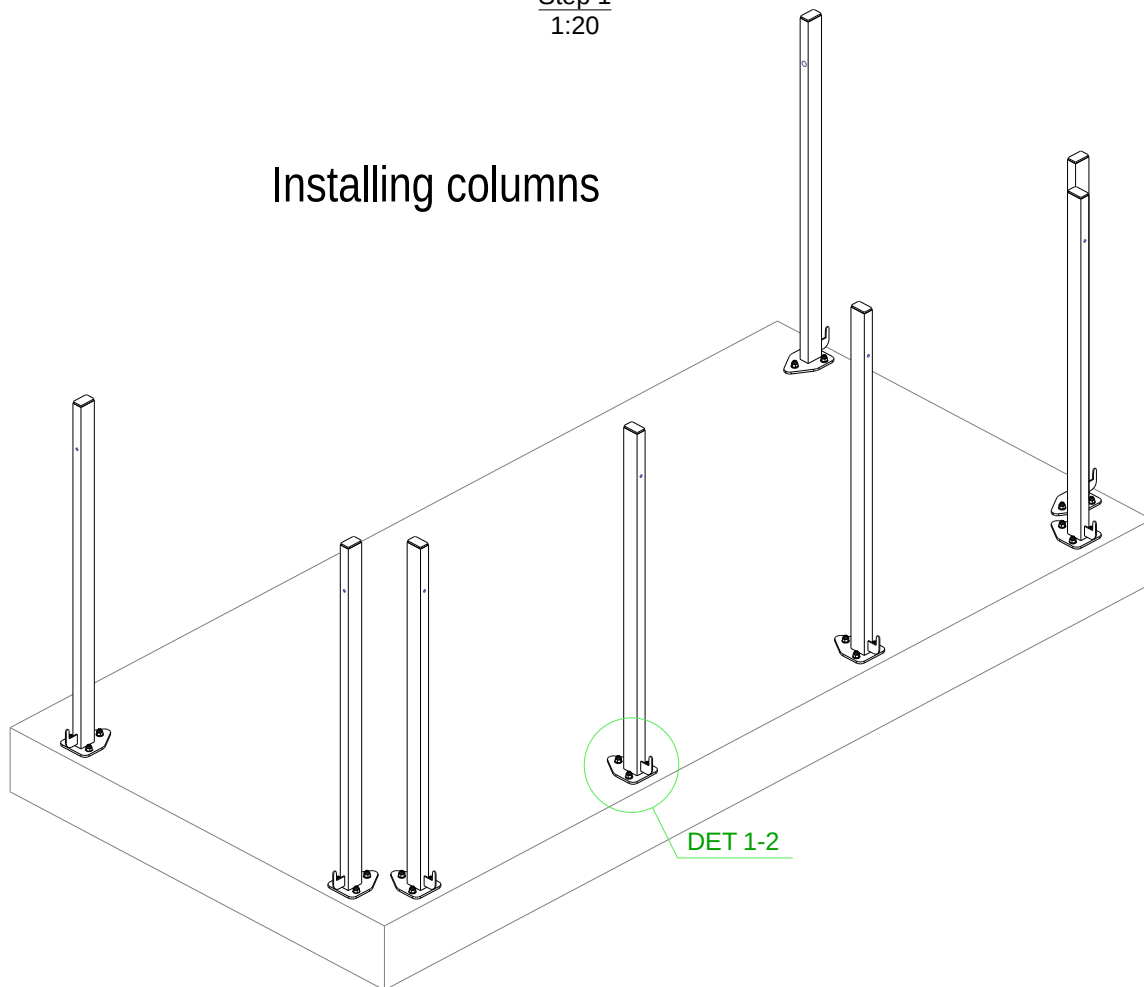

1-2
1:5

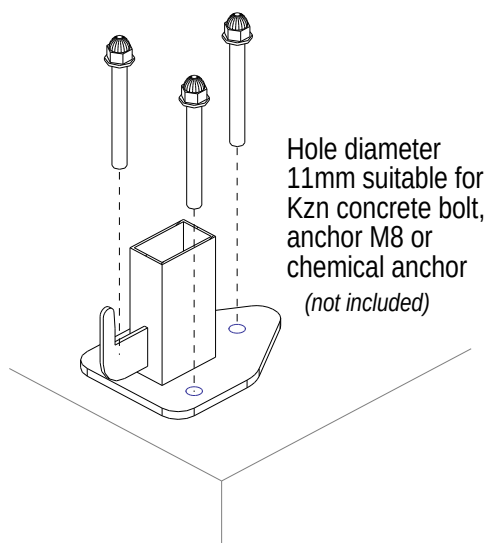

1-1
1:30

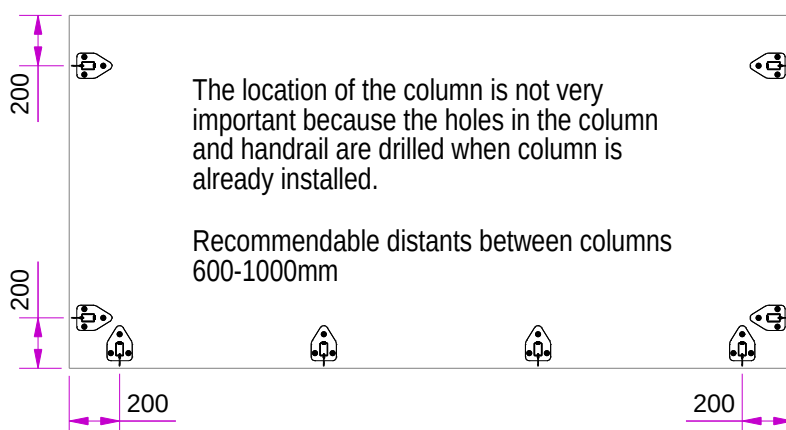

• staBico •

Producer: STABICO OU


Tallinn, Estonia

Tel: +372 555 17 989 e-mail: stabico@stabico.ee


Web: www.stabico.ee

Step 2
1:20


Installing handrails

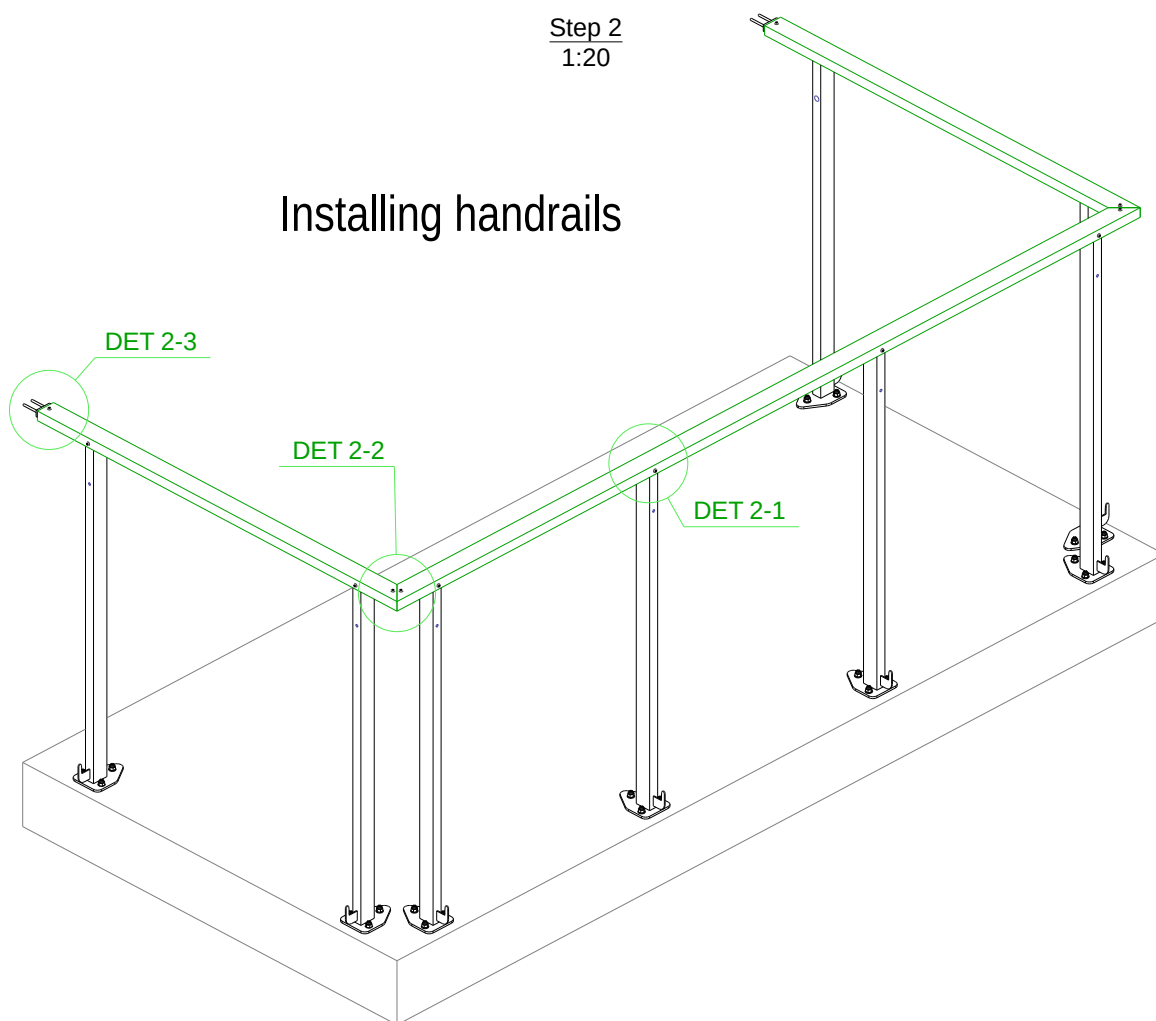


2-1
1:5

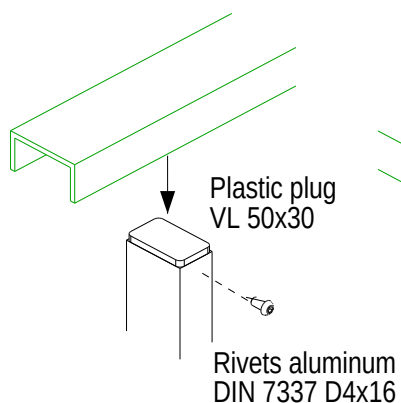


2-2-1
1:5

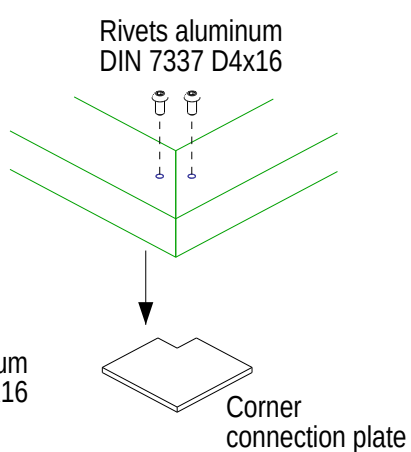

2-2-2
1:5

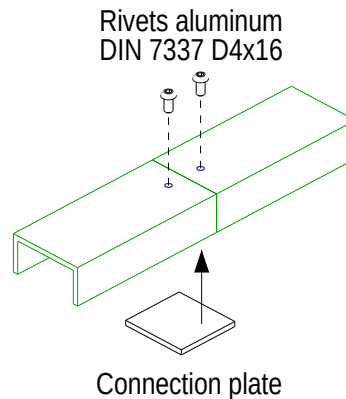

2-3
1:5

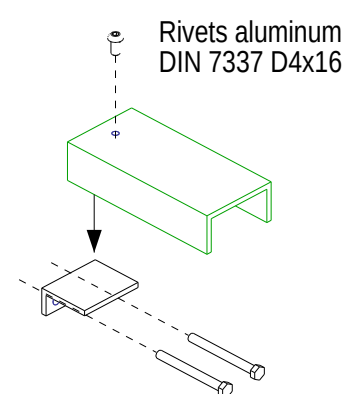

Handrail will be connected to columns with aluminium rivets, these holes are drilled on site after columns are installed

Fasteners depends on the place where will be attached
(not included)

• staBico •

Producer: STABICO OU

Tallinn, Estonia


Tel: +372 555 17 989

e-mail: stabico@stabico.ee


Web: www.stabico.ee

Step 3
1:20


Installing railings

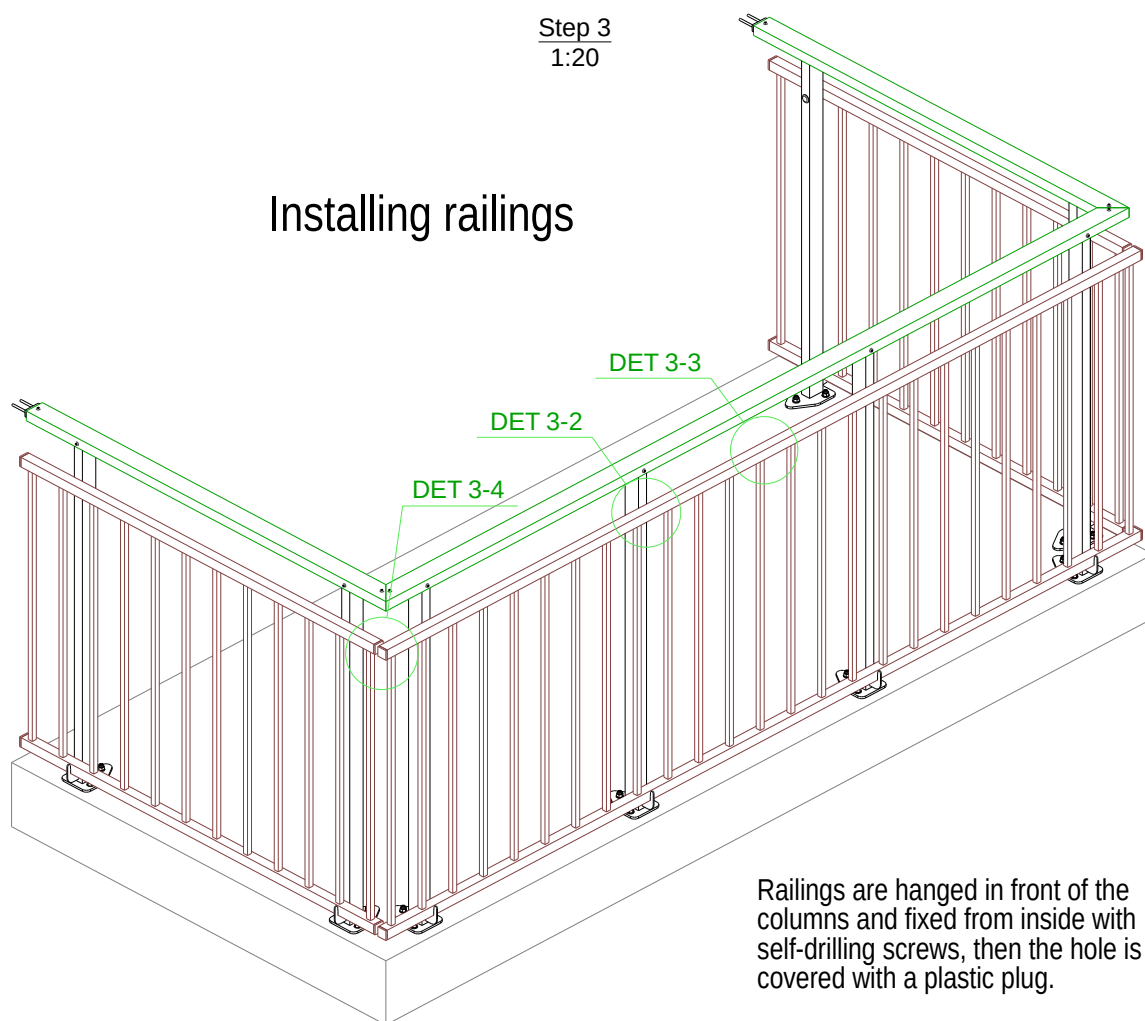


3-1
1:10

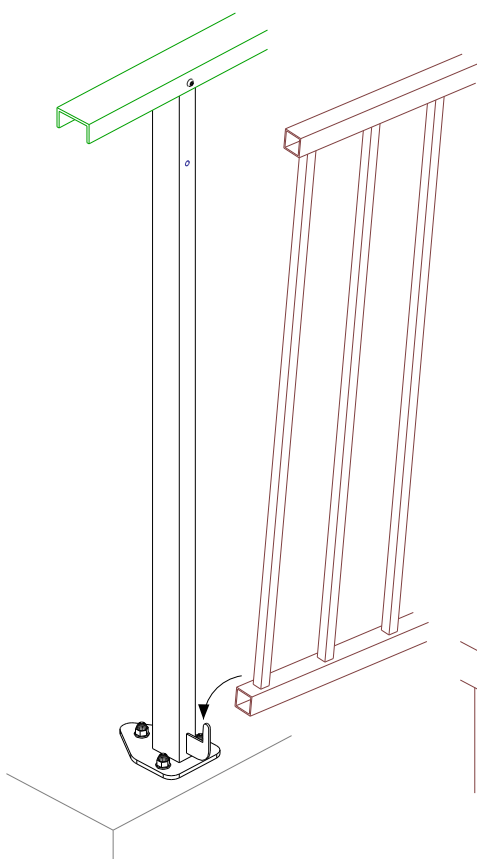


3-2
1:5

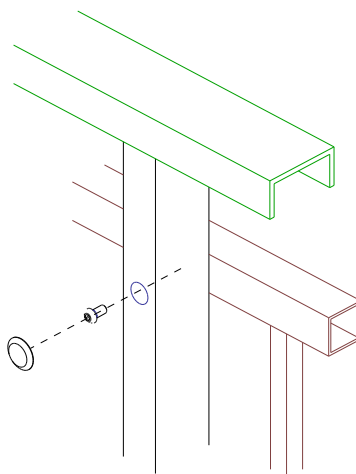

3-3
1:5

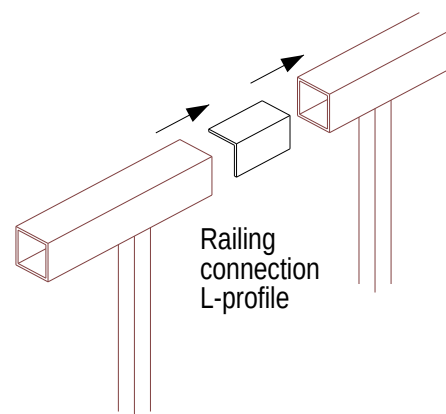

3-4
1:5

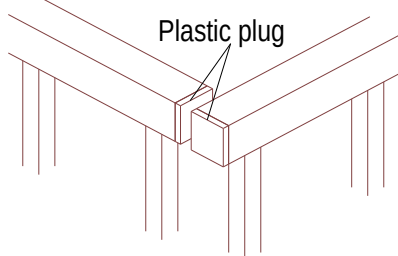

Aluminium profile is fastened with a self-drilling screw Ruspert DIN 7504-k 4,8x16 

• staBico •

Producer: STABICO OU

Tallinn, Estonia

Tel: +372 555 17 989

e-mail: stabico@stabico.ee

Web: www.stabico.ee